


StoPowerwall® Deck Flashing

Detail No.: 5.32

Date:December 2015

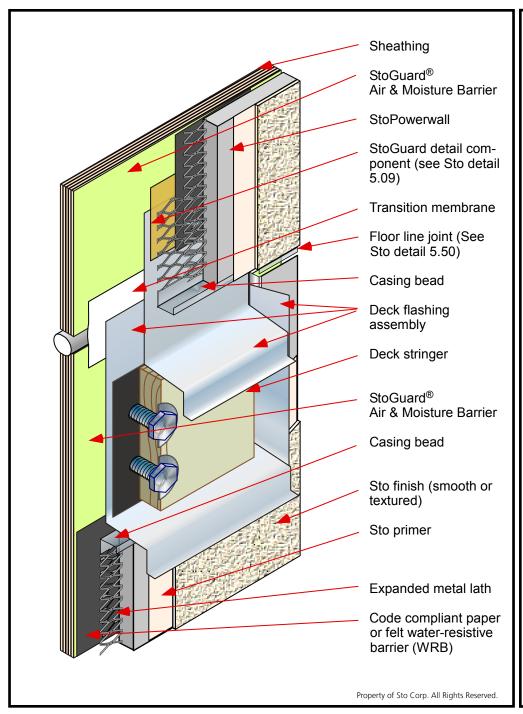

Notes:

- Install StoGuard[®]
 Air & Moisture Barrier
 on the sheathing as
 per plans and specifications.
- 2] Install deck flashing to divert water away from penetrations and to drain water to the exterior of the finished cladding.
- 3] Provide backer rod and sealant between the deck flashing assembly and the stucco casing beads installed around the vertical sides and sill.
- 4] See detail 5.01 for StoGuard® product options.

IMPORTANT: Components not identified as Sto are furnished by other manufacturers and are not necessarily installed by trades who install the Sto products. Refer to project specific contract documents.

ttention www.stocorp.com

Attention

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, or for other construction activities beyond Sto's control. Improperly designed or constructed properly designed or constructe