


## StoQuik® Silver DrainScreen™ Deck Flashing

Detail No.: 11.32 DS

Date: January 2015

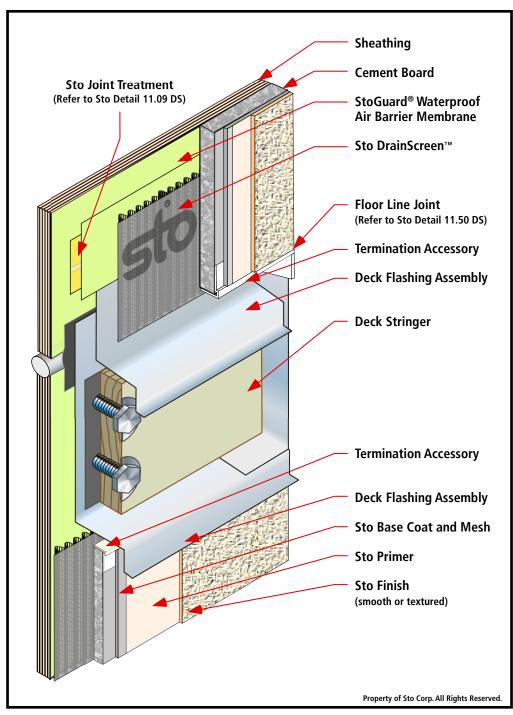

## **Notes:**

- Install StoGuard® Waterproof Air Barrier Membrane on the sheathing per plans and specifications.
- Install deck flashing to divert water away from penetrations and to drain water to the exterior of the finished cladding.
- Provide backer rod and sealant between the deck flashing assembly and the termination accessories installed around the vertical sides of the deck
- Refer to Sto Specification QS 200 DS for complete information on design require ments, installation and accessories.

IMPORTANT: Components not identified as Sto are furnished by other manufacturers and are not necessarily installed by trades who install the Sto products. Refer to project specific contract documents.

ATTENTION www.stocorp.com

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, of for other construction activities beyond Sto's control. Improper use of Sto products or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to Sto products, and to the structure of the building or its components.