


## StoPowerwall® DrainScreen™ Window Head Flashing Preparation

Detail No.: 5.21b DS

**Date: October 2014** 

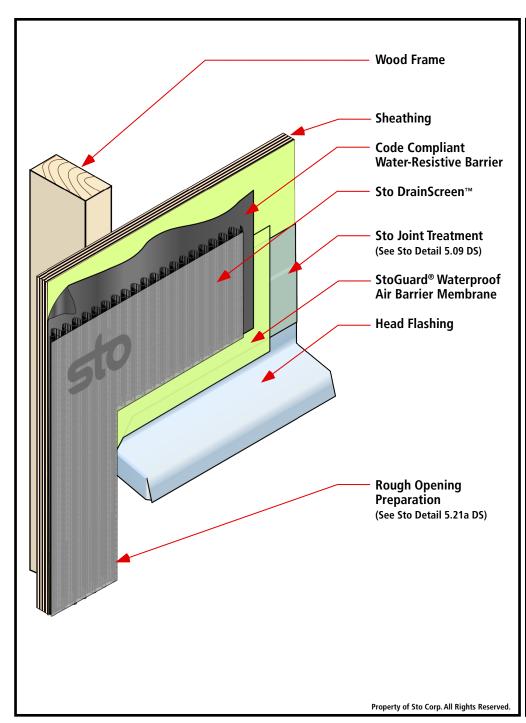

## **Notes:**

- 1. Prepare the rough opening (See Sto Detail 5.21a DS)
- 2. Provide head flashing as required by local codes and window manufacturer.
- Coordinate installation of moisture barrier and flashing with window installer and other related trades.

## **Options:**

StoGuard® Waterproof Air Barrier Membrane options:

- a. Sto EmeraldCoat® (high perm)
- b. StoGuard®VaporSeal™ (vapor impermeable).

IMPORTANT: Components not identified as Sto are furnished by other manufacturers and are not necessarily installed by trades who install the Sto products. Refer to project specific contract documents.

WWW.stocorp.com

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, of for other construction activities beyond Sto's control. Improper use of Sto products or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to Sto products, and to the structure of the building or its components.